


订货代号 TO ORDER

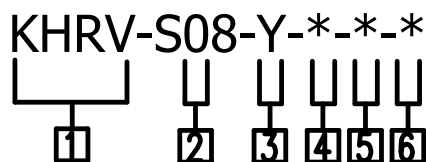

1 功能

KHRV= 直动式溢流阀
Direct-Acting Relief Valve

2 规格 Size

S08=S08 规格

3 弹簧调压范围 Spring Ranges

18=290-1800psi (20-125bar)
Preset:1000psi (69bar)
26=580-2600psi (40-180bar)
Preset:2000psi (138bar)
35=725-3500psi (50-240bar)
Preset:2500psi (172bar)
50=2600-5000psi (180-350bar)
Preset:3000psi (207bar)

4 调节 Adjustment

K= 调节手轮 30mm Dia Knob
内六角调节杆 (Omit for 5 Hex Allen head)

5 设定压力 Setting In Bar

空白 Blank= 预设定 Preset
例 Example:0200=200bar

6 阀块油口 Body Porting

空白 Blank= 不带阀块 None
4T=SAE4
6T=SAE6
2G=G 1/4
3G=G 3/8

安装尺寸 INSTALLATION DIMENSIONS

